WAV WITH LOWERING SUSPENSION



Renault Master






www.amf-bruns.de

ACCESSIBLE VEHICLES WITH LOWERING SUSPENSION

Renault Master

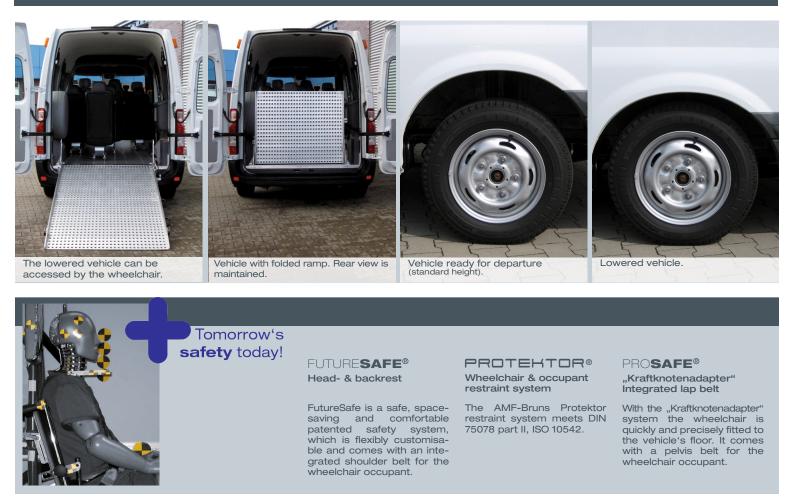

TECHNICAL DATA

» Lowering system	Strong, low-noise power pack, 12 V	» Lifting operation	Automatically when rear door
» Power	Electro-hydraulic from battery		is being closed
» Ramp	Aluminium with anti-slip surface,	» Wheel chair restraint	4-point wheelchair restraint system, crash tested
	foldable in the centre, gas strut		
	supported, profile: Euro Ramp	» Safety belt for the	Pelvis belt and automatic shoulder
» Lowering operation	Via rocker switch in the rear	wheelchair occupant	belt, slip-on wheelchair head rest

AMF-BRUNS PROVIDES THE MAXIMUM OF SAFETY

- » EMC testing according to EU regulations
- » Security valves ensure smooth lowering and lifting of the vehicle
- » The AMF-Bruns 4-point restraint system meets DIN 75078, and ensures that the wheelchairs are safely fixed to the vehicle's floor
- » AMF-Bruns automatic shoulder belt is height-adjustable and in-vehicle tested according to DIN 75078 and EU regulation 2007/46
- » All mounting parts 20 G pull-tested



AMF-Bruns GmbH & Co. KG | Hauptstraße 101 | D-26689 Apen Telefon +49 (0) 44 89 / 72 72 -33 / -50 / -38 | Fax +49 (0) 44 89 / 62 45 hubmatik@amf-bruns.de



www.amf-bruns.de