




Vehicle conversion

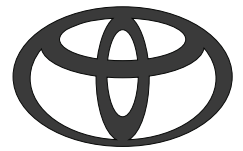

WAV WITH REAR CUT FLOOR

Toyota Proace L1 / L2 (wheelbase: 3,28 m - length: 4,96 m and 5,31 m)

- ✓ Original tank remains
- ✓ Vehicle is 20 G crash tested



Tomorrow's
safety today!



www.amf-bruns.de

ACCESSIBLE VEHICLE WITH REAR CUT FLOOR

Toyota Proace L1 / L2 (wheelbase 3,28 m - length: 4,96 m and 5,31 m)



With the unfolded ramp the vehicle can be accessed comfortably with a wheelchair.



With the optional EASYFLEX ramp folded down the luggage compartment is fully usable.



Optional tip & fold seats allow flexible use of the vehicle.




Optional the vehicle can be equipped with the head & backrest FUTURESAFE.


THESE FACTS MAKE ALL THE DIFFERENCE

- » XXL cutout without any obstructions
- » PROTEKTOR wheelchair & occupant restraint system (ISO approved)
- » Extra long front electric belts for the wheelchair
- » The optional, patented EASYFLEX ramp is extremely user-friendly and can be converted quickly to a loading area - ideal for flexible usage
- » Two optional tip & fold seats in third row
- » Original tank remains
- » Optional head & backrest FUTURESAFE is available


SEATING ARRANGEMENT

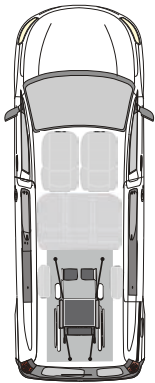


5 + 1
L1

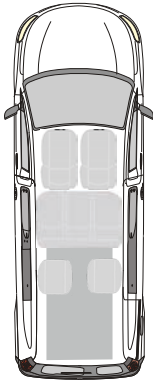

7 + 0
L1

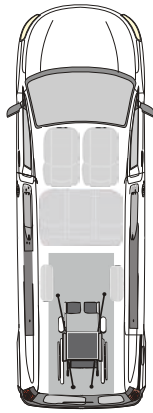

5 + 1
L2

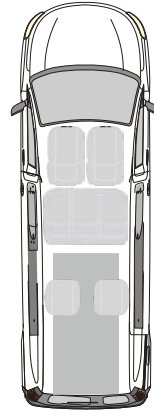

7 + 0
L2

TESTED SAFETY

The vehicle is dynamically crash tested with 20 G.

European type approval.



TECHNICAL DATA

- » Ramp
Aluminium with anti-slip surface, gas strut supported, EASYUSE function providing a very simple and effortless operation with one hand
- » Wheelchair area interior floor dimensions
M: Width approx. 810 mm x length approx. 1.400 mm
XL: Width approx. 810 mm x length approx. 1.450 mm
- » Wheelchair area height dimensions
Rear entrance height approx. 1.500 mm; Interior height approx. 1.420 mm (rear area)



AMF-Bruns GmbH & Co. KG | Hauptstraße 101 | D-26689 Apen
Telefon +49 (0) 44 89 / 72 72 50 | Fax +49 (0) 44 89 / 62 45
hubmatik@amf-bruns.de

www.amf-bruns.de



DIN EN ISO 9001
REG.-NR. 01 0105027