



Vehicle conversion

WAV WITH REAR CUT FLOOR

Volkswagen Caddy 5 / Caddy 5 Maxi

PremiumPartner

von Volkswagen Nutzfahrzeuge

- ✓ Ramp with EasyUse function
- ✓ Vehicle is 20 G crash tested



Image shows Volkswagen Caddy Maxi



www.amf-bruns.de

ACCESSIBLE VEHICLE WITH REAR CUT FLOOR

Volkswagen Caddy 5 / Caddy 5 Maxi



With the unfolded ramp the vehicle can be accessed comfortably with a wheelchair.



With the optional EASYFLEX ramp flat folded the luggage compartment is fully usable.




Optional the vehicle can be equipped with the head & backrest FUTURESAFE.

THESE FACTS MAKE ALL THE DIFFERENCE

- » XXL cutout without any obstructions
- » PROTEKTOR 2.0 occupant & wheelchair restraint system (ISO approved)
- » Extra long front electric belts for the wheelchair
- » The optional, patented EASYFLEX ramp is extremely user-friendly and can be converted quickly to a loading area - ideal for flexible usage
- » Two optional tip & fold seats in 3rd row
- » Two optional single seats in 2nd row
- » Original fuel tank (Caddy Maxi only), exhaust and seat bench in 2nd row remain
- » Optional head & backrest FUTURESAFE is available

SEATING ARRANGEMENTS

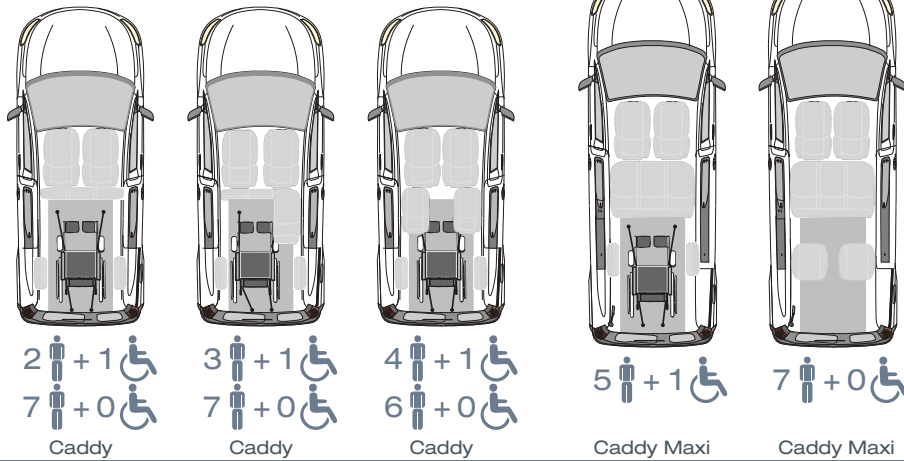

Note: After the conversion, the factory solution as a 7-seater is no longer possible

TESTED SAFETY

The vehicle is dynamically crash tested with 20 G.

European type approval.



TECHNICAL DATA

- » Ramp: New EASYUSE function providing a very simple and effortless operation with one hand, aluminium with anti-slip surface, gas strut supported
- » Wheelchair area interior floor dimensions: Caddy: Width approx. 815 mm x length approx. 1.440 mm; Caddy Maxi: Width approx. 815 mm x length approx. 1.500 mm
- » Wheelchair area height dimensions: Rear entrance height approx. 1.450 mm; Interior height approx. 1.425 mm (rear area)



AMF-Bruns GmbH & Co. KG | Hauptstraße 101 | D-26689 Apen
Telefon +49 (0) 44 89 / 72 72 50 | Fax +49 (0) 44 89 / 62 45
hubmatik@amf-bruns.de

www.amf-bruns.de



DIN EN ISO 9001
REG.-NR. 01 0105027