

Vehicle conversion

## WAV WITH REAR CUT FLOOR

Ford Tourneo Connect / Ford Grand Tourneo Connect



- ✓ Ramp with EasyUse function
- ✓ Vehicle is 20 G crash tested



Image shows Ford Grand Tourneo Connect




[www.amf-bruns.de](http://www.amf-bruns.de)

# ACCESSIBLE VEHICLE WITH REAR CUT FLOOR

Ford Tourneo Connect / Ford Grand Tourneo Connect



With the unfolded ramp the vehicle can be accessed comfortably with a wheelchair.

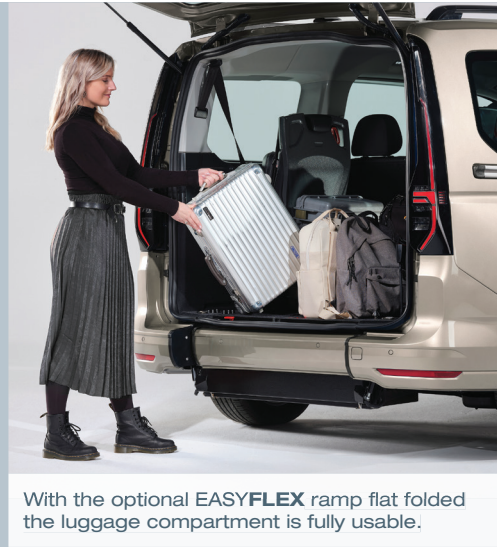

With the optional **EASYFLEX** ramp flat folded the luggage compartment is fully usable.




Optionally, the vehicle can be equipped with the head & backrest **FUTURESAFE**.

## THESE FACTS MAKE ALL THE DIFFERENCE

- » XXL cutout without any obstructions
- » PROTEKTOR 2.0 occupant & wheelchair restraint system (ISO approved)
- » Extra long front electric belts for the wheelchair
- » The optional, patented **EASYFLEX** ramp is extremely user-friendly and can be converted quickly to a loading area - ideal for flexible usage
- » Two optional tip & fold seats in 3rd row (LWB)
- » Two optional single seats in 2nd row (SWB)
- » Original fuel tank (LWB only), exhaust and seat bench in 2nd row remain
- » Optional head & backrest **FUTURESAFE** is available

## SEATING ARRANGEMENTS

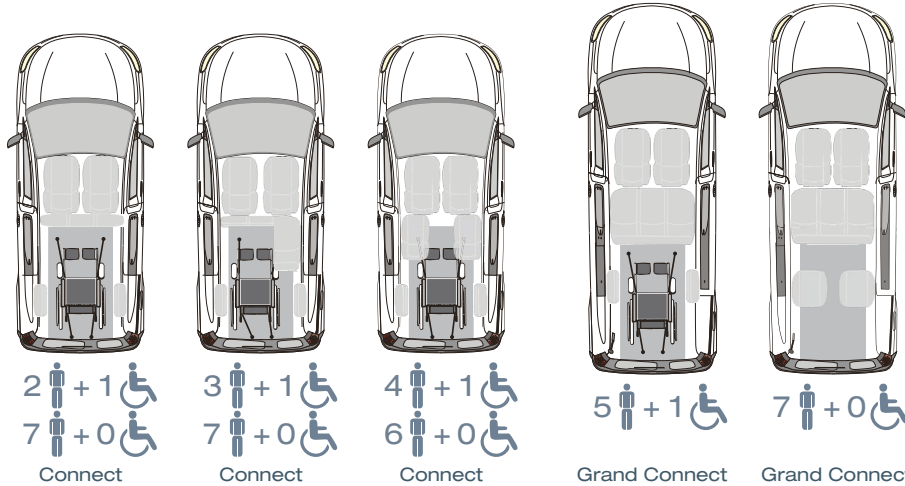

Note: After the conversion, the factory solution as a 7-seater is no longer possible

## TESTED SAFETY

The vehicle is dynamically crash tested with 20 G.

European type approval.



## TECHNICAL DATA

- » Ramp: Aluminium, anti-slip surface, gas strut supported, **EASYUSE** function providing a very simple and effortless operation with one hand
- » Wheelchair area interior floor dimensions: Connect: Width approx. 815 mm x length approx. 1.440 mm; Grand Connect: Width approx. 815 mm x length approx. 1.500 mm
- » Wheelchair area height dimensions: Rear entrance height approx. 1.450 mm; Interior height approx. 1.415 mm (rear area)



**AMF-BRUNS GmbH & Co. KG** | Hauptstraße 101 | D-26689 Apen  
Phone +49 (0) 44 89 / 72 72 50 | Fax +49 (0) 44 89 / 62 45  
hubmatik@amf-bruns.de

[www.amf-bruns.de](http://www.amf-bruns.de)



DIN EN ISO 9001  
REG.-NR. Q1 0105027