



Vehicle conversion

Mercedes-Benz
VanPartner

WAV WITH REAR CUT FLOOR

Mercedes-Benz Citan / T-Class Long (vehicle length: 4.5 m)

- ✓ Flat entry angle
- ✓ Ramp with EasyUse function



Tomorrow's
safety today!



www.amf-bruns.de

ACCESSIBLE VEHICLE WITH REAR CUT FLOOR

Mercedes-Benz Citan / T-Class Long (vehicle length: 4.5 m)



With the unfolded ramp the vehicle can be accessed comfortably with a wheelchair.



Optional **EASYFLEX** ramp folded flat allows full use of the luggage area.




Optional the vehicle can be equipped with the head & backrest **FUTURESAFE**.

THESE FACTS MAKE ALL THE DIFFERENCE

- » XXL cut out without any obstructions
- » **PROTEKTOR 2.0** occupant & wheelchair restraint system (ISO approved)
- » Extra long front electric belts for the wheelchair
- » The optional, patented **EASYFLEX** ramp is extremely user-friendly and can be converted quickly to a loading area - ideal for combined usage
- » Two single seats in 2nd row
- » Optional head & backrest **FUTURESAFE** is available
- » Conversion only available for vehicles with petrol engine (not diesel)

SEATING ARRANGEMENTS

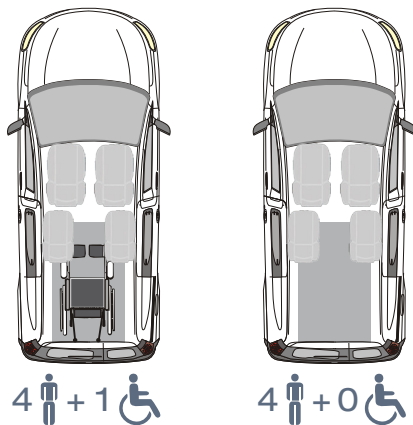

TESTED SAFETY

The vehicle is statically tested acc. to Regulation (EU) 2018/858.

Confirmation of compatibility from Mercedes-Benz.



TECHNICAL DATA

- » Ramp: Aluminium, anti-slip surface, gas strut supported, **EASYUSE** function providing a very simple and effortless operation with one hand
- » Wheelchair area interior floor dimensions: Width approx. 810 mm x length approx. 1.480 mm
- » Wheelchair area height dimensions: Rear entrance height approx. 1.420 mm; Interior height approx. 1.420 mm (Rollstuhlbereich hinten)



AMF-Bruns GmbH & Co. KG | Hauptstraße 101 | D-26689 Apen
Phone +49 (0) 44 89 / 72 72 50 | Fax +49 (0) 44 89 / 62 45
hubmatik@amf-bruns.de

www.amf-bruns.de



DIN EN ISO 9001
REG.-NR. 01 0105027